

Spare Parts List


Hand Pallet Truck--RHP25
RHP20

CONTENT

Exploded view& spare parts list

1.Handle.....	4
2.Chassis.....	6
3.Pump.....	8


1.Handle

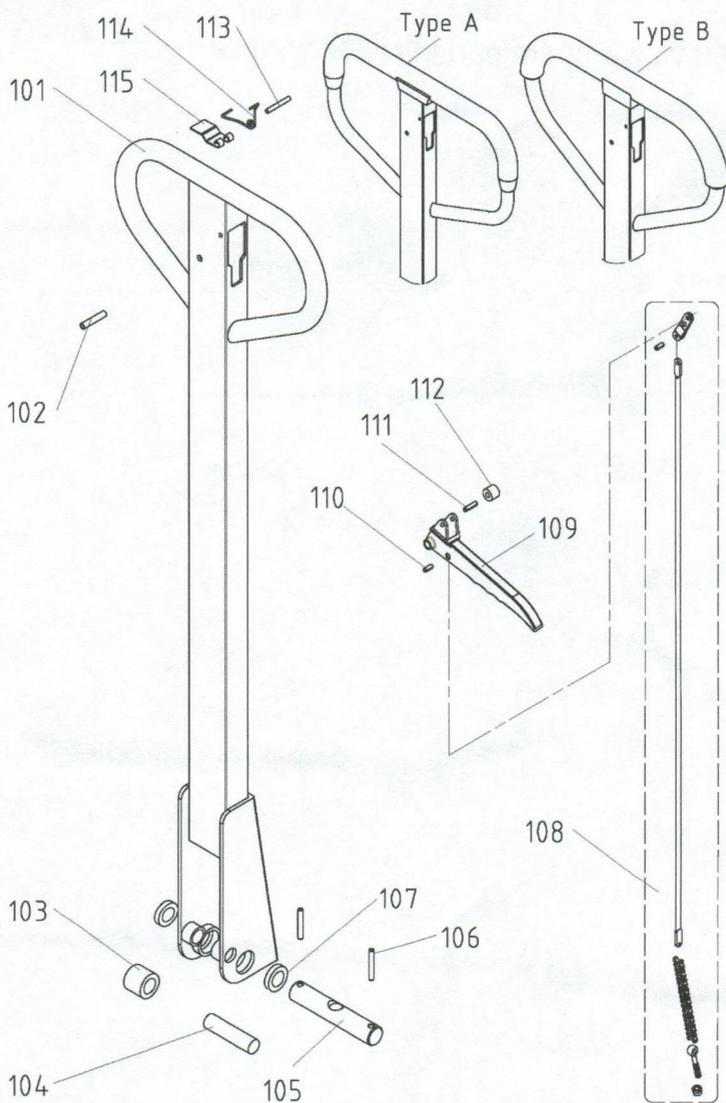

1.Handle

No.	Item	Qty	Note
101	handle Draw-bar	1	Only for 3.Pump Fig.2
102	Spring pin	1	
103	Pinch roller	1	
104	Pinch roller pin	1	
105	Axle with hole	1	
106	Spring Pin	6	
107	Axle sleeve	2	
108	Chain+ Connecting rod	1	
109	Finger lever	1	
110	Spring pin	1	
111	Spring pin	1	
112	Roller	1	
113	Spring pin	1	
114	Torsional spring	1	
115	Hinge	1	
Type A	Square handle with rubber	1	Choice for 3.Pump Fig.1
Type B	Curve handle with rubber	1	Choice for 3.Pump Fig.1

2.Chassis

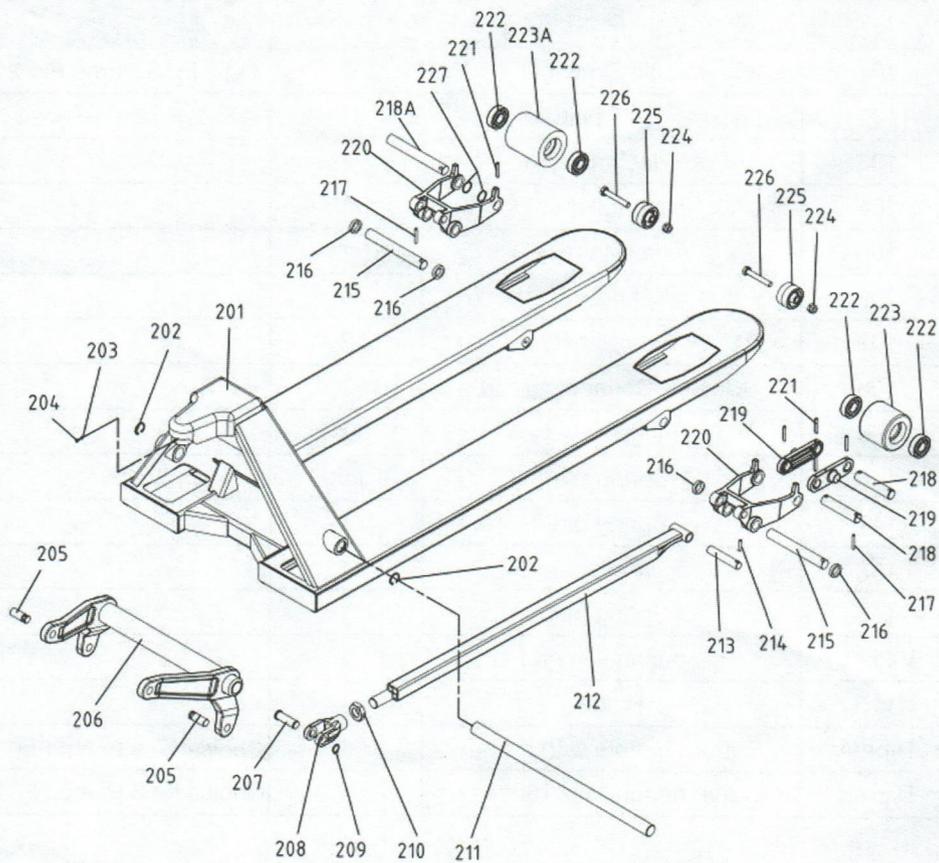

2.Chassis

No.	Item	Qty	Note
201	Chassis	1	
202	Circlip for hole	2	
203	Spring gasket	1	
204	Bolt	1	
205	Connecting pin	2	
206	Swing arm	1	
207	Axle	2	
208	Push rod fork	2	
209	Circlip for shaft	2	
210	Nut	2	
211	Long axle	1	
212	Push rod	2	
213	Axle	2	
214	Spring pin	2	
215	Level block axle	2	
216	Axle sleeve	4	
217	Spring pin	2	
218	Roller axle	4	Double
219	Tri-connect plate	4	
220	Level block	2	
221	Spring pin	2	
222	Bearing	8	
223	Roller	4	Double
224	Nut	2	
225	Enter roller	2	
226	Bolt	2	
227	Axle adjusting gasket	4	Single
218A	Roller axle	2	Single
223A	roller	2	Single

3.Pump

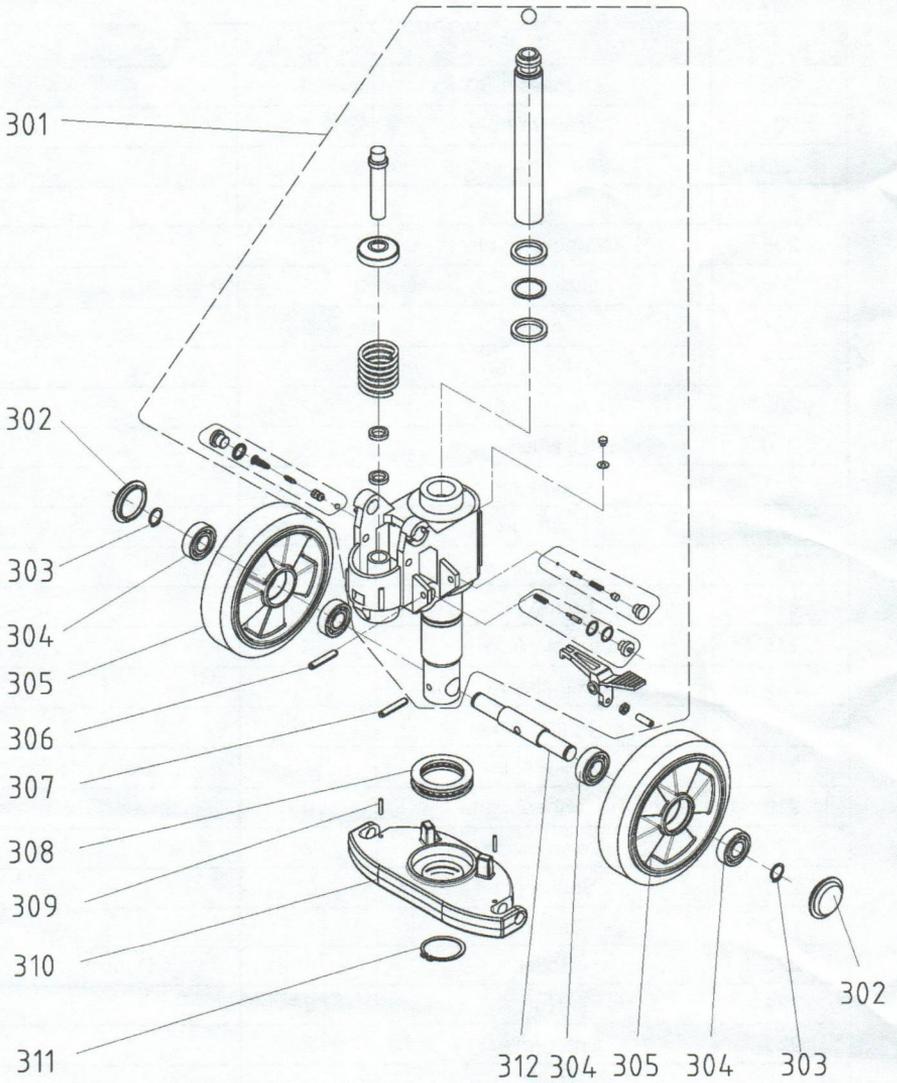


Fig.1

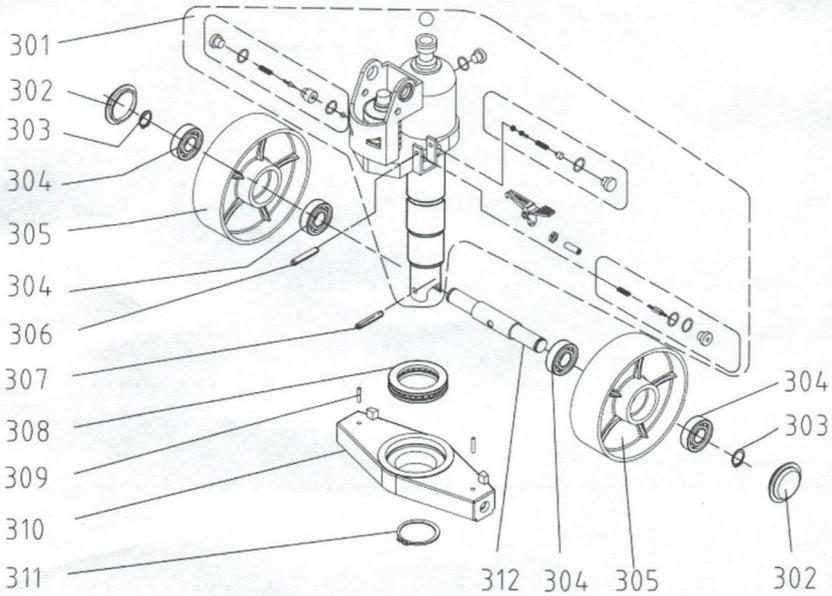


Fig.2

3.Pump

No.	Item	Qty	Note
301	Pump	1	
302	Dust cover	2	
303	Axle spring gasket	2	
304	Bearing	4	
305	Wheel	2	
306	Spring pin	1	
307	Spring pin	1	
308	Pushing ball bearing	1	
309	Spring pin	2	
310	Thrust strip	1	
311	Circlip for shaft	1	
312	Wheel axle	1	

NOTES

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Your distributor:

